Cable converter CC2-Locky-TTL/USB

Description

The CC2-Locky-TTL/USB cable converter offers USB-to-serial conversion in a space saving package. It is used to connect RFID controllers Locky-BP(T,F) to PC.

The cable is connected to one of the PC's USB ports and to Locky-BP(T,F)s UART connector, which is located on the back side of the controller. No external power supply is required – the converter provides the necessary supply voltage.

Technical specifications

- operating temperature range — 0 to +40°C;
- power supply voltage — 5VDC from USB port;
- interfaces — USB on PC side;
  UART (0/5V levels) on Locky-BP(T,F) side;
- cable length — 1 m.

UART connector pin-out

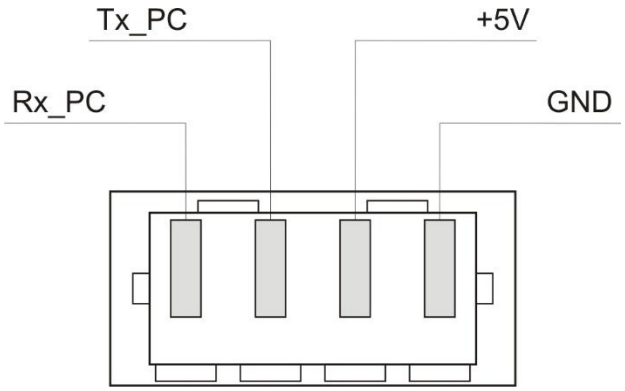

Installation

For proper operation, appropriate drivers have to be installed. This can be done by **two sequential starts** of *CDM20814-Setup.exe*, which can be downloaded from www.teracomsystems.com.